

INSTALLATION INSTRUCTIONS FOR THE PLANNING AND INSTALLATION OF A SOLARFOX[®] DISPLAY

The following information will provide a brief overview for installing a Solarfox[®] displays. The instructions are aimed particularly at installers and planners.

Table of contents

1.	Time and cost estimate	2
2.	Work steps	2
3.	Assembly variants in indoor and outdoor applications	3
4.	Connectors	3
5.	Data communication and network integration	5
6.	Checklist	6
7.	Technical specification for wall mounting and dimensions	7
8.	Interfaces / compatible monitoring systems - version: 03-2016	12
9.	Connection of old systems and photovoltaic systems with no data logger	13
10.	Display commissioning with subsequent commissioning of the data source	13
11.	Connection of additional systems and data sources	13
12.	Timing and power saving feature	14
13.	Maintenance	14
14.	Warranty	14

1. Time and cost estimate

The following calculation helps you calculate the cost of installing a Solarfox[®] display and plan. The following calculation assumes that electricity and network connection (LAN or WLAN) are already available at the installation location.

Operation	Time
1) Drill four holes and attach the anchor	ca. 10 min
2) Installation of the wall mount plate	ca. 5 min
3) Installation of the display and connection of the power and LAN cables	ca. 5 min
4) Registration of the display under http://setup.solar-fox.com (it should be performed on any computer via the Web form even before installation) the access data is immediately sent to you from the system via email.	ca. 5-10 min
5) Implementation of display setup and configuration of the Solarfox [®] display using a USB keyboard	5 min
Summe	ca. 30-35 min

For a quick and smooth installation and commissioning of the Solarfox[®] display we recommend an installation in advance to coordinate all necessary information with the IT managers (Administrator). To do this, use our Checklist (point 11). This ensures that an Internet connection and all the necessary data are available on site.

2. Work steps

For the installation of a Solarfox[®] display we recommend the following steps:

- 1) Registration of the display under <http://setup.solar-fox.de> with the serial number
- 2) Preparation of the connections to the installation location
- 3) Installation of the display
- 4) Configuration of the display
- 5) User can access the online management of the display from any computer with Internet access

3. Assembly variants in indoor and outdoor applications

- I) On-site installation options for indoor Solarfox[®] SF-300 displays:
- (1) Wall mounting by a tilting wall mount (included)
 - (2) Ceiling mounting using a ceiling mount (accessory)
 - (3) Two leg or one leg stand foot - height 180 cm (accessory)
 - (4) Stands for display placement E.g. shelf or sideboard (accessory)
 - (5) Installation in a window - with ceiling or floor stand (accessory)
 - (6) Mounting with a swivel holder which can be adjusted horizontally and vertically (accessory)
- II) On-site installation options for outdoor Solarfox[®] SF-400 displays:
- (1) Wall mounting with wall holder (optional 0 ° or 15 ° angle of inclination)
 - (2) Display orientation: East, West, North, (southern exposure only with shading)

4. Connectors


- 2 x power socket (230V) (It is also possible to use a multiple socket outlet)
- 1 x RJ45 network (Ethernet) connection (cable: CAT5e)

Instead of a network connection via Ethernet cable, it is possible to use a Wi-Fi network. To do this, Solarfox[®] offers an optional WLAN stick with an antenna.

Alternatively, a UMTS router can also be used for a mobile radio connection. A flat rate is required. The traffic depends on the content and the refresh rate of your slideshow. We recommend therefore a flat rate or a rate with 1-2 GB volume. (Please check reception quality on the spot!)

The sockets can be provided behind the display in an outlet area of the wall bracket, we recommend two lower wall sockets. The recess is to install sufficient to the sockets in this way invisible to the wall or behind the display. On the spot only a wall outlet or power supply connection should exist, the second line can be powered using a standard extension (PDU).

Connection plan Solarfox[®] display (example)

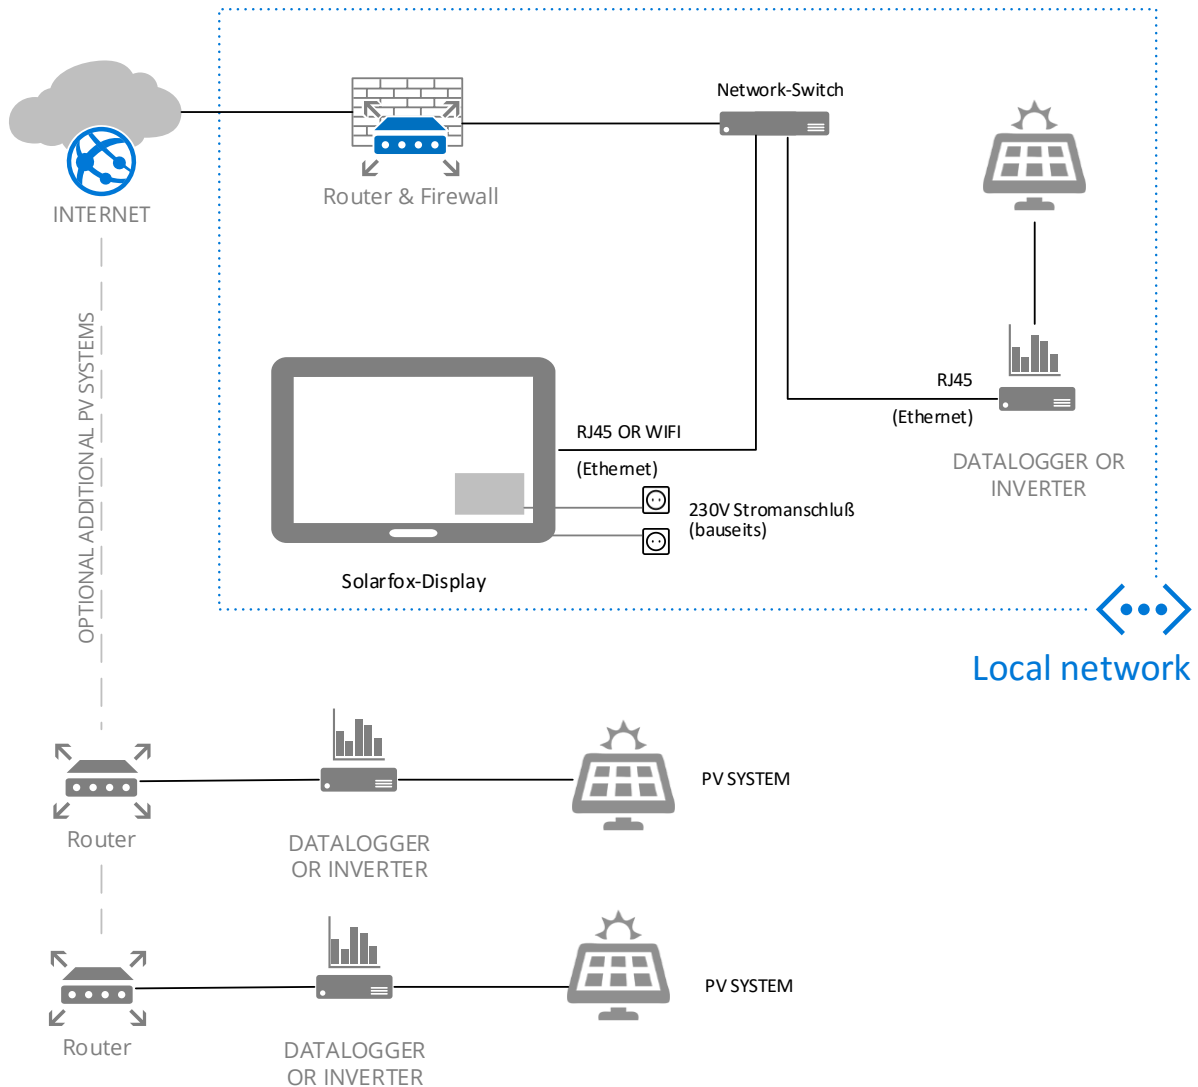

The data connection to the photovoltaic system is always done via the Web interface. By so doing, you are completely independent of location and very flexible as well. (See section 5)

5. Data communication and network integration

An Internet connection is required for the operation of the Solarfox[®] display. In order to do this, the display gets of yield data from the Solarfox[®] Web server at regular intervals. You will find below all information that are important for the data connection in company or agency networks. Please ensure a corresponding port forwarding or port sharing for the listed IP addresses. Other firewall rules are not required. There is only a data retrieval. A data upload is not on the device. If you change the display content is the data modification on the part of the Web server. The Solarfox[®] display gets data from the Internet or from the Solarfox[®] Web server only. This ensures high reliability.

Information for the network integration	
Network:	LAN, WLAN, UMTS (3G)
Connectivity:	Dynamic IP-Address (DHCP) or static IP-Address
URL:	show.solarshow.net
IP:	212.224.82.131 (Solarfox [®] Slideshow 2.x) 212.224.82.132 (Solarfox [®] Slideshow 2.x - Status) 212.224.82.155 (Solarfox [®] Update Service - Firmware)
Port:	80
Proxy server:	optional

6. Checklist

Checklist for installing Solarfox[®] display systems

The following checklist can be used to clarify important framework data, requirements and questions in advance before installing a Solarfox[®] display.

Date:	
-------	--

1) General information about the property / building:

Name of the property:	
Property number:	
Street:	
Postal code and city:	
Contact person:	
Tel:	
E-Mail:	

2) Information about existing connections for the Solarfox[®] display

	Yes	No
Is there a possibility of accessing the Internet? (LAN/WLAN/etc.)	<input type="checkbox"/>	<input type="checkbox"/>
Does it consist of a power connector with 2 Sockets at installation?	<input type="checkbox"/>	<input type="checkbox"/>

3) Data supervision / monitoring

What energy sources should be visualized? What data loggers / counters are available?

Renewable energy system (PV, wind, cogeneration, etc.)	Power kW
Photovoltaic system:	

4) Installation of display and data logger


	Yes	No
Has a data logger / monitoring already been installed?	<input type="checkbox"/>	<input type="checkbox"/>
Does the data logger transfer data on the Internet already?	<input type="checkbox"/>	<input type="checkbox"/>
Which data logger or monitoring system is concerned?		

7. Technical specification for wall mounting and dimensions

Wall panel's wall mount for Solarfox[®] SF-300 24" and 32"


The carrier plate is wall mounted and then holds on the display with the inclinable carrier. Please select the appropriate screws and anchors for your wall (Please pay attention to the weight (see table). These are not included in delivery.

The compact dimensions of the wall mount allows for an easy and flexible installation of electrical outlets in the side portion of the mount and thus behind the display, so that they are no longer visible after the display assembly.

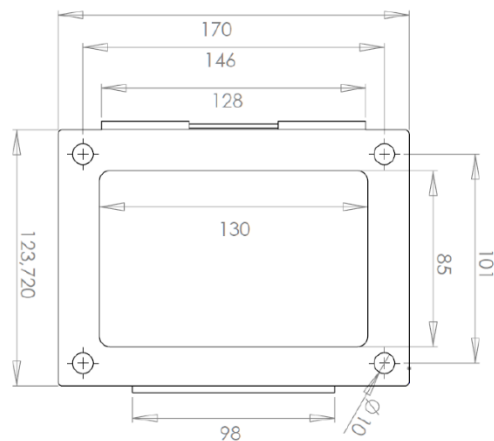

Wall plate's wall mount for Solarfox[®] SF-300 42", 43", 47", 49" and 55"

The carrier plate is wall mounted and then holds the display with inclinable carriers. Please select the appropriate screws and anchors for your wall. Please pay attention to the weight (see table). These are not included in delivery. Flush sockets (1 x LAN, 2 x 230 V) can be placed in the two middle free surfaces.

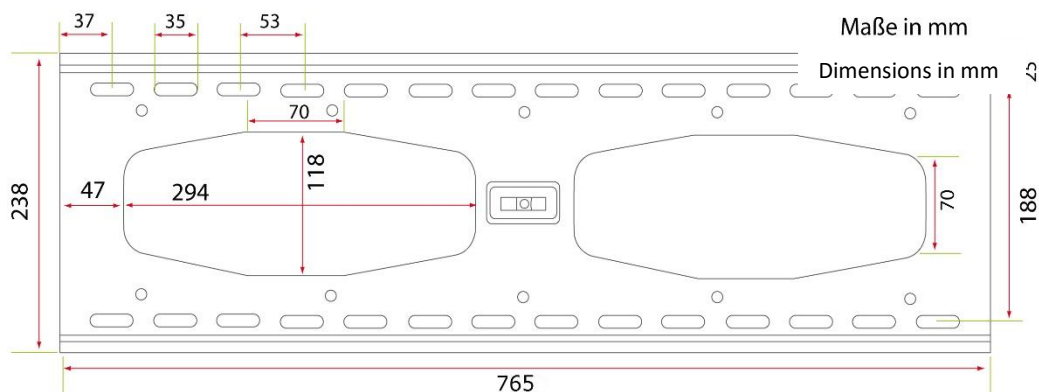

Solarfox[®] SF-300 Series: display dimensions and weight

Display	Length	Length	Depth without WH	Depth with WH *	Weight
SF-300 24"	566 mm	417 mm	59 mm	84 mm	5 kg
SF-300 32"	740 mm	442 mm	36 mm	87 mm	8 kg
SF-300 42" *	990 mm	590 mm	40 mm	95 mm	14 kg
SF-300 43"	970 mm	390 mm	56 mm	111 mm	14 kg
SF-300 47" *	1100 mm	650 mm	40 mm	97 mm	19 kg
SF-300 49"	1100 mm	638 mm	64 mm	119 mm	19 kg
SF-300 55"	1238 mm	715 mm	37 mm	92 mm	22 kg

* Discontinued model



Solarfox[®] SF-400 Series: display- dimensions and weight

Display	Length	Length	Depth without WH	Depth with WH *	Weight
SF-300 32"	895 mm	630 mm	234 mm	274 mm	54 kg
SF-300 42"	1127 mm	761 mm	233 mm	273 mm	63 kg
SF-300 55"	1430 mm	980 mm	245 mm	285 mm	85 kg

* The fan covers are also attached on the back. These have the same depth as the wall mountings but are not shown in the drawings below. They each put 40 mm at the top left and right.




Caution: In case you plan to place the display on a wall, you should check the exact dimensions once again with our sales. Due to model changes, slight deviations of components may occur temporarily.

Technical drawing: SF-400 32"

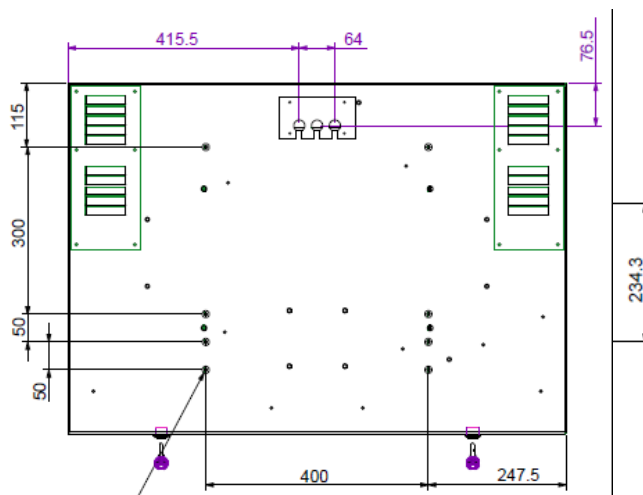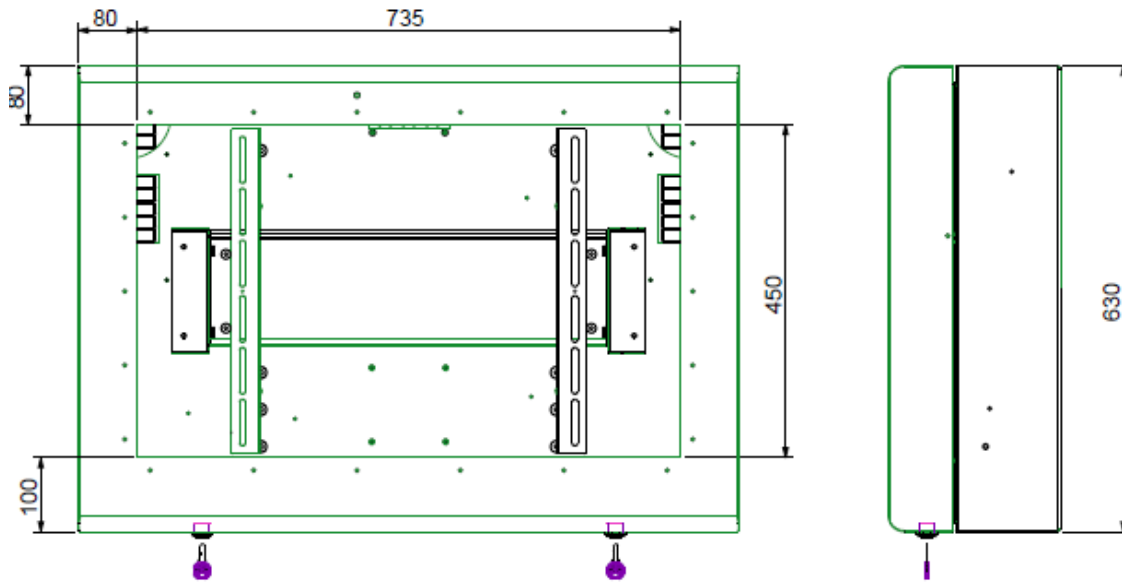


All dimensions in mm

Technical drawing: SF-400 42"

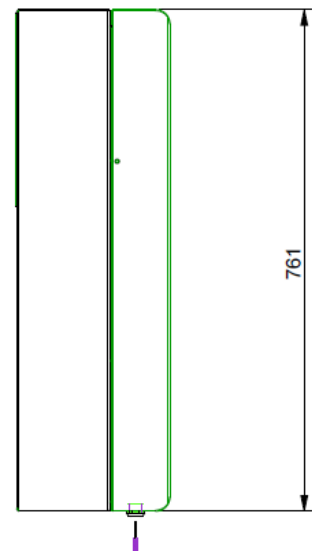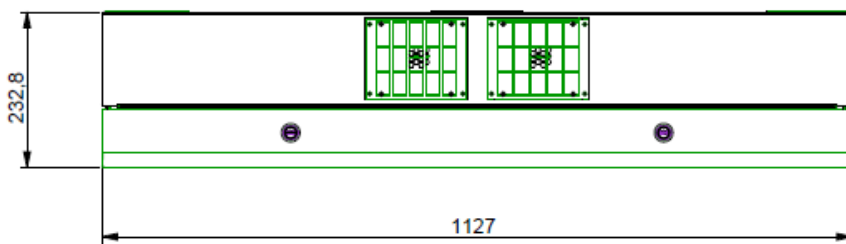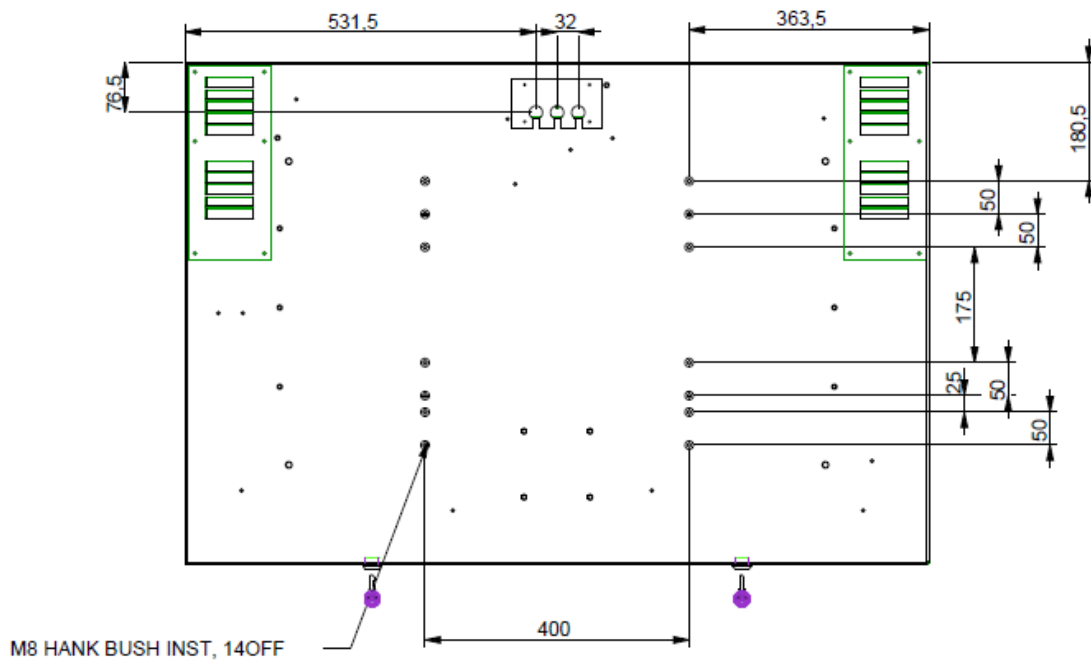

All dimensions in mm

Technical drawing: SF-400 55"

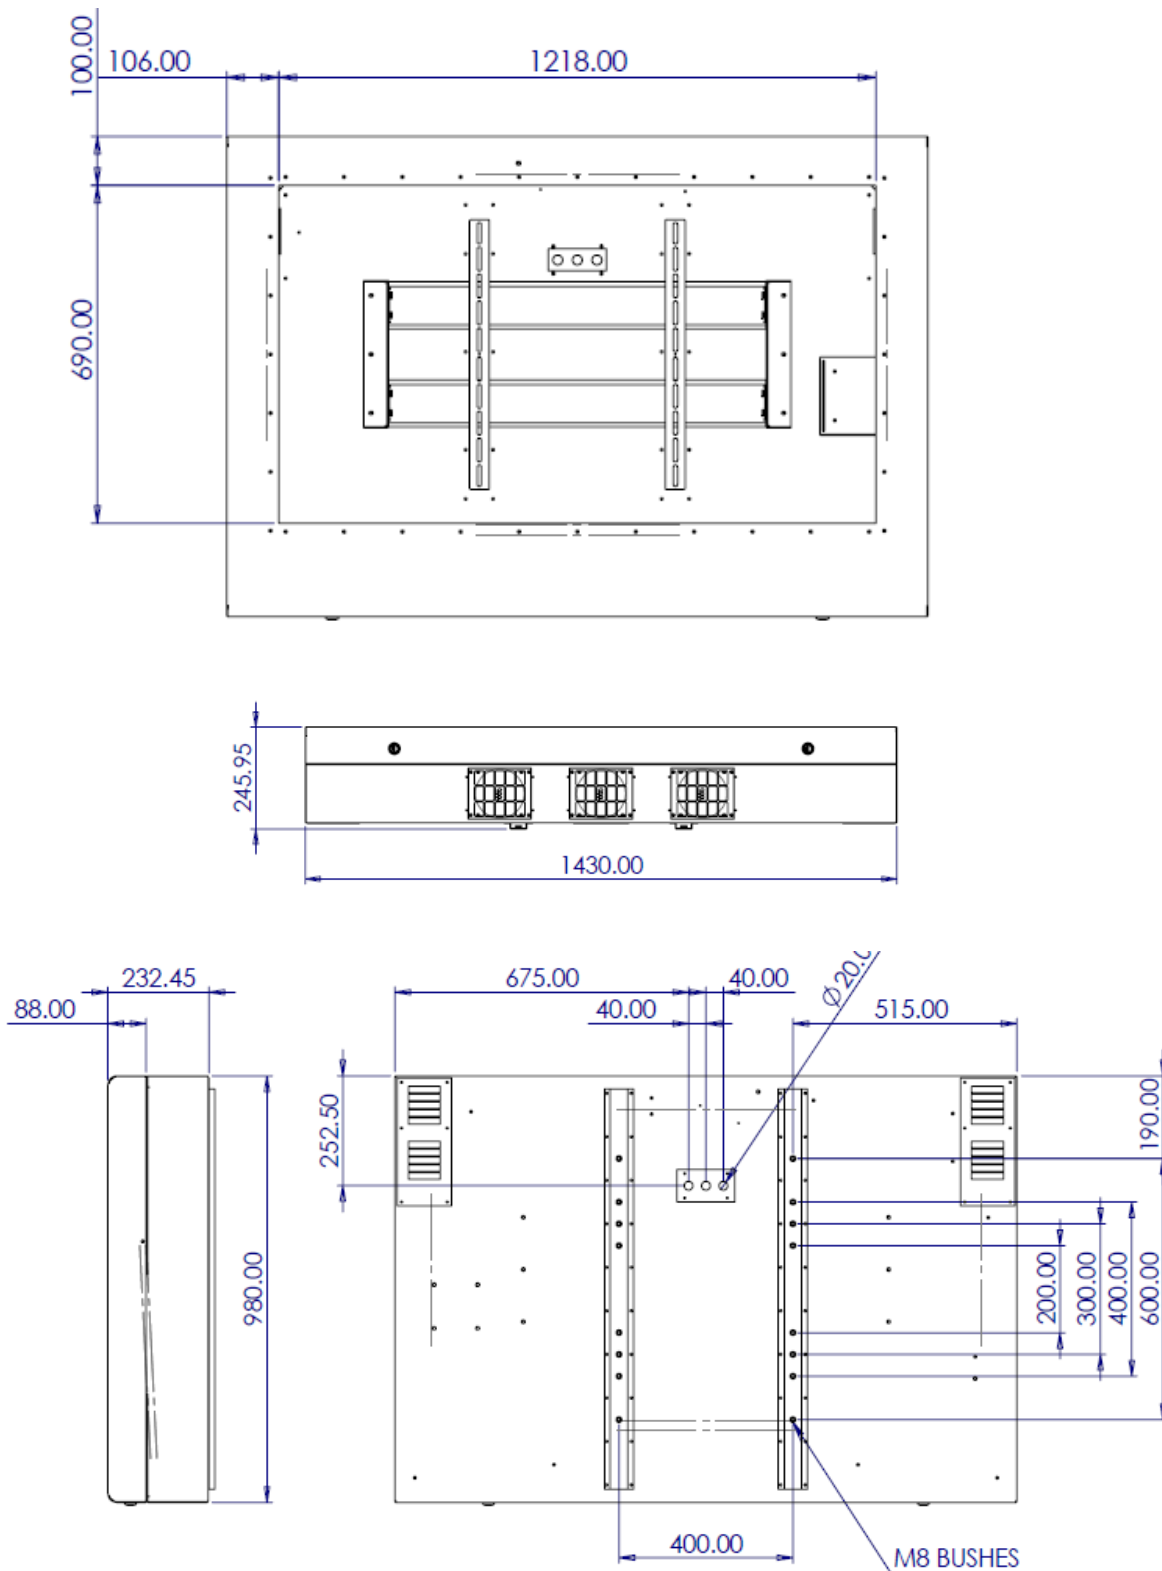

8. Interfaces / compatible monitoring systems version: 03-2016

Manufacturer	Datalogger / Monitoring system	Interface via webportal / Internet / http	Interface via FTP	Interface via email-push
ABB / Power One	All types	<input checked="" type="checkbox"/>		
AS Solar / Enerserve	AS Portal / Enerserve Portal	<input checked="" type="checkbox"/>		
Benning Solar	Monitoring Portal	<input checked="" type="checkbox"/>		
CC Log	Monitoring Portal	<input checked="" type="checkbox"/>		
Danfoss GmbH	Danfoss ComLynx Datalogger (Alle Modelle)		<input checked="" type="checkbox"/>	
Ecodata GmbH PowerDog	All types	<input checked="" type="checkbox"/>		
Enphase Energy	Enphase Monitoring Portal	<input checked="" type="checkbox"/>		
E3/DC	E3/DC Portal	<input checked="" type="checkbox"/>		
Fronius International GmbH	Fronius Datalogger Web	<input checked="" type="checkbox"/>		
IBC SOLAR AG	IBC Solar SolControl (Alle Modelle)	<input checked="" type="checkbox"/>		
KACO new energy GmbH	Powador proLOG (Alle Modelle)	<input checked="" type="checkbox"/>		
KOSTAL Solar Electric GmbH	Kostal PIKO (Alle Modelle)	<input checked="" type="checkbox"/>		
Mage Solar AG	Mage Securtec (Alle Modelle)	<input checked="" type="checkbox"/>		
Meteocontrol GmbH	Web'log (Alle Modelle)	<input checked="" type="checkbox"/>		
Meier-NT	ADL-MXS ADL-MXSmini		<input checked="" type="checkbox"/>	
Oelmaier Technology GmbH	Oelmaier logPAC (Alle Modelle)		<input checked="" type="checkbox"/>	
POWER ONE / ABB	POWER-ONE Aurora CDD	<input checked="" type="checkbox"/>		
REFUsoL GmbH / Advanced Energy	REFUlog (Alle Modelle)	<input checked="" type="checkbox"/>		
relatio RT Süd GmbH	Relatio fieldLog (Alle Modelle)	<input checked="" type="checkbox"/>		
SAJ Solar	All types	<input checked="" type="checkbox"/>		
Schueco Sunalyzer	Schueco Sunalyzer Web PR		<input checked="" type="checkbox"/>	
Siemens AG	Siemens Sinvert PVM 17	<input checked="" type="checkbox"/>		
Skytron Energy GmbH	Skylog	<input checked="" type="checkbox"/>		
SMA AG	Sunny Portal (All types)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Solar Edge	Monitoring Portal	<input checked="" type="checkbox"/>		
Solare Datensysteme GmbH	Solar-Log (Alle Modelle)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Solarworld AG	Solarworld Suntrol Datalogger		<input checked="" type="checkbox"/>	
Sonnenbatterie	Monitoring Portal	<input checked="" type="checkbox"/>		
Solarmax	Solarmax MaxWeb XP			<input checked="" type="checkbox"/>
Sunways AG	Sunways (All types)	<input checked="" type="checkbox"/>		
SynaptiQ / 3E	Monitoring Portal	<input checked="" type="checkbox"/>		
Tigo Energy	Monitoring Portal	<input checked="" type="checkbox"/>		
Zeversolar	Monitoring Portal	<input checked="" type="checkbox"/>		

Attention: All Solarfox[®] data interface are basically free of charge. There are running costs or fees by Solarfox[®]. Portal operators for monitoring expenses depending on the manufacturer and portal. However, this does not affect the Solarfox[®] displays. Solarfox[®] does not charge any ongoing portal fees.

9. Connection of old systems and photovoltaic systems with no data logger

In some cases, there is no connection point of the display on the photovoltaic system in the desired location or no data can be provided by the system. This can have the following reasons for example:

- 1) There is no data logger available
- 2) There is an old data logger without Internet available
- 3) The data logger is not fitted with an Internet connection
- 4) The data logger is the property of system operator and no data access allowed

In the case of the above mentioned constellations, the system data can be simulated also. In this case, Solarfox[®] draws on regional radiation values or plant data of a comparable plant and approximately calculates the yield of your system using an algorithm. Accordingly, we need only the plant size and alignment of the concerned units. Then the Solarfox[®] even without a connection to your system can approximately display the yield data. The deviation of income moves only in the lower single digits. The data can be adapted at any time but also in our system online identified deviations and edited.

10. Display commissioning with subsequent commissioning of the data source

We recommend the installation or online registration of the Solarfox[®] display only after the data logger has been put into operation, and if the photovoltaic system has once had to transfer data. This speeds up the installation process. You can also independently register the Solarfox[®] display no data source and first unlock this without data source. Transitional can operate the display no data source or unlock a demo system and unhide.

11. Connection of additional systems and data sources

After commissioning, you can add any more data sources to a Solarfox[®] display. You need only an appropriate data sources package, which must be unlocked. In this way, photovoltaic systems, wind power plants, CHP or other equipment can be added.

12. Timing and power saving feature

Solarfox[®] displays have a built-in timer, which allows individual day at a certain time to turn on the display and turn off at a specified time. In this way the appliance can be adapted energy-efficient to the desired service life.

13. Maintenance

If you are mounting the display on a ceiling or higher than 2 m, you should provide a USB extension cable. Connect it to the control computer and attach these in form coiled up behind the display. You can use them in case of a service for connecting a keyboard.

14. Warranty

The warranty is 36 months. Depending on the warranty, a replacement or the processing by Pick-Up & return service is carried out. More information, please refer to our warranty conditions.